 


USER MANUAL

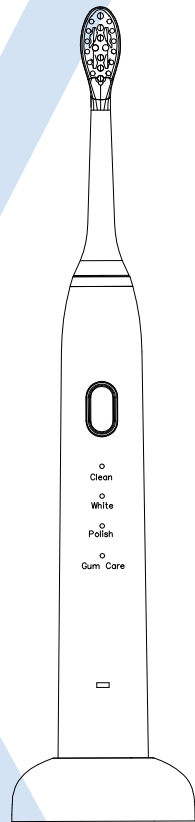

Catalogue

Safety precautions.....	3
General information.....	4
Storage and battery charge for the electrical toothbrush.....	4
Charging instructions	4
Maintenance instruction.....	5
Instruction of use.....	5
Time of brushing	6
Product standard	6
Fault diagnosis	7
Warranty instruction	7
Warranty card.....	8

Thank you for choosing our electrical toothbrush. Before use, please read this manual carefully to get the right methods to use the toothbrush and make full excellent use of our toothbrush. We believe it will bring huge convenience and comfort to you and your family in life.

Please keep the manual for future reference. If you encounter any problems during use, feel free to contact our after-sale service website or our company, we will be at your service. Thank you for your cooperation!

Safety Precautions


In order to reduce the risk of faulty, shock, injury, fire, death and damage on the toothbrush, or property of yours. Please follow the safety precautions below.

Icon identification

Danger: The potential danger for serious or worse injury.	Caution: Warnings for potential serious or worse injury.
Caution: potential for injury	This icon is used for performance that users are not suppose to do.
This icon is used for reminding the users to ensure the safety, what steps that users must do.	
Danger	Caution
This product contains a built-in rechargeable battery. Do not put it into fire, heat it up or charge, use or place it at high temp. Over temp ill cause fire or explosion.	Do not disassemble the product except it i 's out of use. It may cause fire, shock or injury
Warnings	Accident or injury can happen with kids if children or infant uses it and swallow the parts
1 Unplug the charger and stop using on any unusual faulty conditions. It may cause fire, shock or injury. - Unusual faulty conditions: - The machine or the charger is out of shape or over heat. - Burnt smell of the machine or the charger. - Abnormal noise out of the machine or the charger during theUse. Please contact the shop where you buy the products or contact after-sale service immediately.	Caution
1 Ensure the charger's working voltage matches its ratedvoltage. Charger goes all the way to the socket during the use or it may cause fire	1 If you do not use the product for a long time, please unplug it from the household power socket. Or it will cause the insulation performance going bad and result in electric shock or fire.
1 Clean the plug regularly in case the dust causing the moisture which leads to insulation failure and cause fire. Unplug the head and clean it.	Caution
1 This product should not be used on the people who has physical,sensory and mental issues. People who lacks of experience and underage should have guidance while using and guard should take full responsibility for their safety. Please avoid children takes the machine as toys as it may be danger. Otherwise, it may cause an accident or injury.	Do not press the brush head against the teeth or gums or for a long time. Do not put the plastic parts of the machine or the brush head directly to the head for it may damages your teeth and gums.
1 Batteries must be removed from the product before they are discarded, and the batteries should be disposed of safely.	Do not share the head with family members or others as it may cause infection or inflammation.
	Please do not place metal objects, such as coins or paper clip. Or it the

3

 General Information

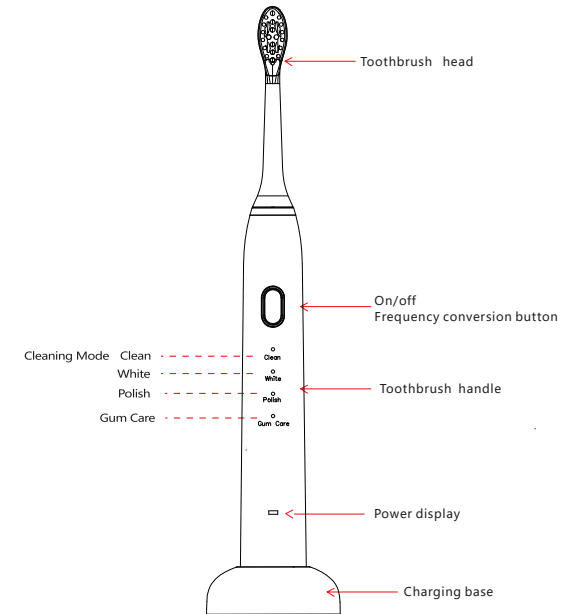

Storage And Recharge Of The Toothbrush

- During its first usage like newly bought products and if you haven' tuse it for 3months and overyou' ll need to charge it regarding the rest of the power.
- The suitable temperature is between 5 degree to 35 degree. If the temp is over or below,it will cause the charger can' t charge nomally or can' t charge at all.
- To keep sufficient battery,it' s advised to charge 2 times separately to save up the charging time too.
- It is normal the temp of machine goes up at using and charging time.
- The charging base is not waterproof, please do not rinse the charging base with water to avoid malfunction during charging.

Charging instructions

- Charging time: The charging time is about 7 hours.
- Charging status: the yellow light of the battery symbol light is on and the breathing light is on, indicating that it is in the charging state; when it is fully charged, the green light is always on.
- Low voltage reminder: Press the switch and the motor does not work, and the yellow battery light flashes continuously.

4

Maintenance instruction




Clean the brush head

Clean the brush head and bristles after use and let it dry naturally.
Do not pull the bristles as it' ll be deformed by it and r
resulting in bristles to shed



Clean the main part of the toothbrush

Rinse with water and let it dry naturally.
Do not submerge it in the water.
Do not use the water with over 40 °C or use any acid fluid for cleaning

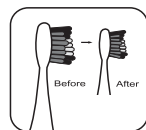

Change the brush head

The dentist advises replacing the brush head every three months.

Step of usage



Insert the toothbrush head into the output end carefully line. It is required a little gap between the main body and the head. The gap is the room for the vibration use.



The brush bristles and the gum should be 45 degree, move slowly through usage.



In case of the bursting of the toothpaste, apply small amount of it on the head.



Gently grasp the main body while move it slowly with circular movement. Do not force the toothbrush or scrub it.




Soak the head before putting it into mouth, Press the switch for 0.5 sec and choose the Suitable mode.



Rinse your mouth with water after brushing.

5

Brushing Time

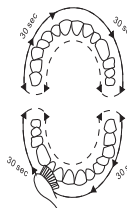

Dentists suggest at least 2 minutes brushing every time. During the process, you will feel a stop every 30 seconds. It is to remind you that you need to equalize the four sections in your mouth to achieve the best cleaning result.

Function description



Timing for 2 minutes



3 weeks; standby mode



Rinse the whole body



Induction charging



4 modes for you to choose



Tynex bristles

- Memory function: the toothbrush chip will remember after the use the current brushing mode and it will start with the mode the next time it switches on.
- Press gently and continuously on the switch button within 3 seconds, the mode will switch into clean. It will switch off after 3 seconds in work.
- During the normal operating process, the tenseny of the mode will switch between **Normal--Strong** if keep pressing the button over 3 seconds.

Cleaning mode instruction

Clean mode: standard cleaning
White mode: effectively remove the dental plague and whiten teeth.
Polish mode: polish/whitening the teeth.
Gum care: gum care, massage the gums, improve the teeth sensitivity.

Product Specification

Product Name: Sonic Electric Toothbrush	Model: CD Series
Handle: rated voltage: 3.7V rated power: 1.8W	
Charging: input DC 5V 500mA rated power: 2.5W	
Vibration frequency: basic (low) 31000 times/min ±10%; 38000 times/min ±10%	
Waterproof rating: IPX7	
Working hours: A total of 4 minutes in the morning and evening every day when fully charged, a total of about 22 days of brushing cycle.	

6

Fault Diagnosis

Condition	Possible Reason	Measurements
Vibration reduction	1. Force the head on the teeth while brushing 2. Brush head is too close to the main body	1. Place the head gently on the teeth 2. Take the head out and replace on the end but with a gap between the body and head
Working hours short even the toothbrush is charged.	1. The main body is not placed on the chargingbase during charging. 2. Low battery.	1. Not enough charging time. 2. The product is out of use for over 6 months. 3.The battery has reached its usage limit.
Toothbrush doesn't work at all.	Place the bod vertically on the charging base to have Contacts and confirm the Indicating light is on.	1. Charging required. 2. Contact the after-sale service to replace the battery.

Warranty

Thank you for choosing our product! Our company will strictly abide the laws, subjecting to the specific provision of the law.

Here is the explanation of customer rights on products;

Please leave authentic information of your details whilst placing orders. We can not offer free after sale service if the contact detail is not right. Within the guaranteed warranty time we offer free service for the products that have issues under the normal operation use.

From the purchasing day, the machine's body has one year free warranty service that does not include the brush head and other consumable parts.

Conditions in bellow exclude the warrant service

Damage on the products that caused by improper or lack of maintenance on product.

(for example: use the wrong voltage device; plugging in the improper socket ; other man-made damaged caused by fire, earthquake, flood, lighting, other natural disaster, public hazards and abnormal power supply, voltage etc.)Termination of warranty service that's within the warranty service products being dissembled or amend by non-authorized personnel. 2.use the parts that doesn't belong to our company.3.Damages caused by non-domestic use(such as industrial or commercial use). The free warranty service for the replacement parts or the whole machine within the warranty period shall terminate at the same time.

Maintenance service outside the scope of warranty shall be charged as required.In the warranty period due to material or production defects, the company will replace the arts or products.

When applying for a warranty service, please send the defect products and certificate that could prove the warranty dates(background order data) to the factory.

The company will be keeping parts and the whole machine that' s replaced. Contact service center if there' s any maintenance service.

7

Warranty card

Item description	
Series:	
Purchase date:	
Customer name:	
Phone number :	
Address:	
Fault description:	
Code on the machine	

Please fill in the form carefully and send the warranty card back to the company with the faulty machine.

CERTIFICATION

Date: _____
Inspector name: _____

8