

Safety precautions.....	3
General information.....	4
Storage and battery charge for the electrical toothbrush	4
Charging instructions	4
Maintenance instruction.....	5
Instruction of use.....	5
Time of brushing	6
Product standard	6
Fault diagnosis	7
Warranty instruction	7
Warranty card.....	8

Thank you for choosing our electrical toothbrush. Before use, please read this manual carefully to get the right methods to use the toothbrush and make full excellent use of our toothbrush. We believe it will bring huge convenience and comfort to you and your family in life.

Please keep the manual for future reference. If you encounter any problems during use, feel free to contact our after-sale service website or our company, we will be at your service. Thank you for your cooperation!

In order to reduce the risk of faulty, shock, injury, fire, death and damage on the toothbrush, or property of yours. Please follow the safety precautions below.

Danger: The potential danger for serious or worse injury.	Caution: Warnings for potential serious or worse injury
Caution: potential for injury	This icon is used for performance that users are not suppose to do.

to ensure the safety, what steps that users must do.

- ⊘ This product contains a built-in rechargeable battery. Do not put it into fire, heat it up or charge, use or place it at high temperature. Over temp ill cause fire or explosion.
- ⊘ Do not disassemble the product except it's out of use. It may cause fire, shock or injury
- ⊘ Accident or injury can happen with

ⓘ Unplug the charger and stop using on any unusual faulty conditions. It may cause fire, shock or injury.

- Unusual faulty conditions:
 - ① The machine or the charger is out of shape or over heat.
 - ② Bunt smell of the machine or the charger.
 - ③ Abnormal noise out of the machine or the charger during the use. Please contact the shop where you buy the products or contact after-sale service immediately.
 - ④ Ensure the charger's working voltage matches its kilovoltage. Charger goes all the way to the socket during the use or it may cause fire.
- ① If you do not use the product for a long time, please unplug it from the household power socket. Or it will cause the insulation performance to get bad and result in electric shock or fire.

② People with severe periodontal disease, dental history, or suspected oral diseases should consult a doctor before use.
-

- Do not disassemble the product except it is out of use. It may cause fire, shock or injury
- Accident or injury can happen with

 Caution

- !** If you do not use the product for a long time, please unplug it from the household power socket. Or it will cause the insulation performance going bad and result in electric shock or fire.
- !** People with severe periodontal disease, dental history, or suspected oral diseases should consult a doctor before use.
- ⚠ Caution**

⊘ Do not press the brush head against the teeth or gums or for a long time. Do not put the plastic parts of the machine or the brush head directly to the head for it may damages your teeth and gums.

- ⊗ Do not share the head with family members or others as it may cause infection or inflammation.
- ⊗ Please do not place metal objects, such as coins or paper clip. Or it the

3

Acoustic brush head

On/Off
Frequency change button

Stem of the brush

Cleaning Mode

- Clean
- White
- Polish
- Gum Care
- Sensitive

Frequency display

1. During its first usage like newly bought products and if you haven't use it for 3 months and over you'll need to charge it regarding the rest of the power.
2. The suitable temperature is between 5 degree to 35 degree. If the temp is over or below, it will cause the charger can't charge normally or can't charge at all.
3. To keep sufficient battery, it's advised to charge 2 times separately to save up the charging time too.
4. It is normal the temp of machine goes up at using and charging time.

1.Charging time: about 7 hours
2.Charging status: mode light goes into flashing status and it goes off after 3 seconds then it goes to charging status.
3.Charging complete: when the intensity light Green goes on and stays on.
4.Low battery alert: when the intensity light yellow is flickering, press the on/off button and yellow light goes off after 2 seconds' flickering.
5.Battery information: all five LED lights on the same time means the capacity is over 90% if it's 4 lights, capacity over 75% if it's 3 lights on, capacity over 50% lights on, capacity over 25% light on, capacity over 15%. If the yellow light goes on it means capacity is below 10%, it will repeat for 4 times for reminding.

Clean the brush head
Clean the brush head and bristles after use and let it dry naturally.
Do not pull the bristles as it'll be deformed by it and resulting in bristles to shed

Rinse with water and let it dry naturally.
Do not submerge it in the water.
Do not use the water with over 40 °C or use any acid fluid for cleaning

Change the brush head
The dentist advises replacing the brush head every three months.

1. Insert the toothbrush head into the output and carefully move it in a figure-eight motion between the main body and the head. The gap is the room for the vibration use.

The brush bristles and the gum should be 45 degree, move slowly through usage.
2. In case of the bursting of the toothpaste, apply small amount of it on the head.

Gently grasp the main body while move it slowly with circular movement. Do not force the toothbrush or scrub it.
3. Soak the head before putting it into mouth. Press the switch for 0.5 sec and choose the Suitable mode.

Rinse your mouth with water after brushing.

- Dentists suggest at least 2 minutes brushing every time. During the process, you will feel a stop every 30 seconds. It is to remind you that you need to equalize the four sections in your mouth to achieve the best cleaning result.
- The color changing from blue to white shows the bristles are worn out. When half the bristles appear white, it is reminding you to change the head.

Timing for 2 minutes 6 weeks; standby mode Rise the whole body

- 1 Memory function: the toothbrush chip will remember after the use the current brushing mode and it will start with the mode the next time it switches on.

Clean mode: standard cleaning
White mode: effectively remove the dental plaque and whiten teeth.
Polish mode: polish/whitening the teeth.
Gum care: gum care, massage the gums, improve the teeth sensitivity.
Sensitive: through the low and high frequency reduce the stimulation on the teeth.

Name: intelligent acoustic wave electric toothbrush
Model: C series
Main power: 25W
Battery : lithium ion battery 18500/1200mAh 3.7v
Charging seat input 5V DC 500mA

Condition	Possible Reason	Measurements
Vibration reduction	1. Force the head on the teeth while brushing 2. Brush head is too close to the main body	1. Place the head gently on the teeth 2. Take the head out and replace on the end but with a gap between the body and head
Working hours short even the toothbrush is charged.	1. The main body is not placed on the charging base during charging 2. Low battery	1. Not enough charging time. 2. The product is out of use for over 6 months 3. The battery has reached its usage limit.
Toothbrush doesn't work at all.	1. Place the body vertically on the charging base to leave Contacts and confirm the Indicating light is on	1. Charging required. 2. Contact the after-sale service to replace the battery.

Thank you for choosing our product! Our company will strictly abide the laws, subjecting to the specific provision of the law.

Here is the explanation of customer rights on products;

Please leave authentic information of your details whilst placing orders. We can not offer free after sale service if the contact detail is not right. Within the guaranteed warranty time we offer free service for the products that have issues under the normal operation use.

From the purchasing day, the machine charger and its body has a one year free warranty service that does not include the brush head and other consumable parts.

Damage on the products that caused by improper or lack of maintenance on product.
(for example: use the wrong voltage device; plugging in the improper socket; man-made
damaged caused by fire, earthquake, flood, lighting other natural disaster, public hazards and
abnormal power supply, voltage etc.) Termination of warranty service that within the warranty
service products being dissembled or amend by non-authorized personnel. Use the parts that
not the original parts.

does not belong to our company's damages caused by non-domestic uses (such as industrial or commercial use). The free warranty service for the replacement parts or the whole machine within the warranty period shall terminate at the same time.

Maintenance service outside the scope of warranty shall be charged as required. In the warranty period due to material or production defects, the company will replace the parts or products.

When applying for a warranty service, please send the defect products and certificate that could prove the warranty dates (background order data) to the factory.

The company will be keeping parts and the whole machine that's replaced. Contact service center if there's any maintenance service.

Item description	
Series:	
Purchase date:	
Customer name:	
Phone number :	
Address:	
Fault description:	
Code on the machine	

Please fill in the form carefully and send the warranty card back to the company with the faulty machine.

CERTIFICATION

Date: _____

Inspector name: _____